



Removing Front Panel/ Screen Logic Board

Tools used in this guide

- [Plastic Opening Tools](#)
- [T6 Torx Screwdriver](#)



Step 1 - Front panel/ Screen Logic Board

- Using the iPod opening tool pry off the top faceplate.
- Place the tool in the small crack that runs along the side of the phone and pry.



Step 2

- Using the T6 Torx Screwdriver remove all 4 small screws.




Step 3

- Remove silver plate from phone.



Step 4

- Using the spudger remove the plastic camera casing

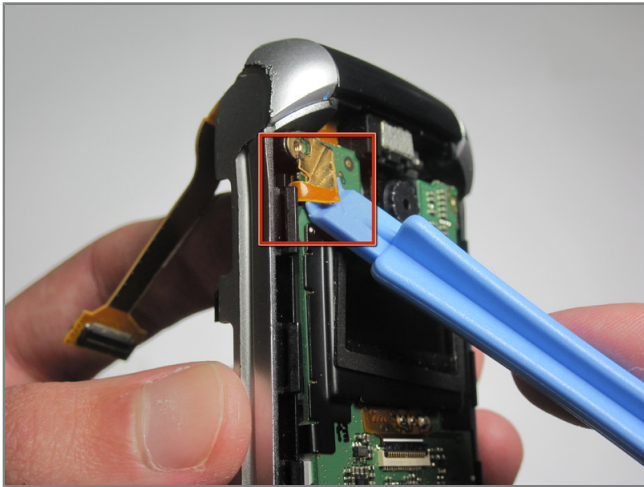

Step 5

- Using the iPod Opening Tool remove the yellow flex cable from the green logic board.



Step 6

- Use Spudger or hands to detach flex cable from front screen logic board